



Gear It Up™

ERROR CODE LIST

Start Up Procedure

When the game powers up or exits programming mode, the game will go through a sensor check to make sure all the sensors are working properly.

The gears will begin to rotate and the marquee spinner will rotate as well. The solenoids will pull in and push out in sequence. The ball will then move up the game until it falls into one of the return holes.

When the ball returns home, and the marquee is properly homed, the game will start. If an error is found, the game will display "Err#" on the BONUS TICKETS display.

Error Codes:

Error #	Description
8	Home position sensor
9	#1 WIN sensor
10	#2 WIN sensor
11	#1 MISS sensor
12	#2 MISS sensor
13	#3 MISS sensor
14	Bonus WIN sensor
15	Bonus WHEEL sensor
HELP	Out of tickets (# = tickets owed)

If you still need further assistance, please contact Bob's Space Racers Technical Support at 386-677-0761 ext 146 or visit us at [BSR Technical Support](#)

